


Drive Roller Puller Instructions

Technical Note TNC03

Use the drive roller puller to free a stuck upper drive roller from its motor shaft.

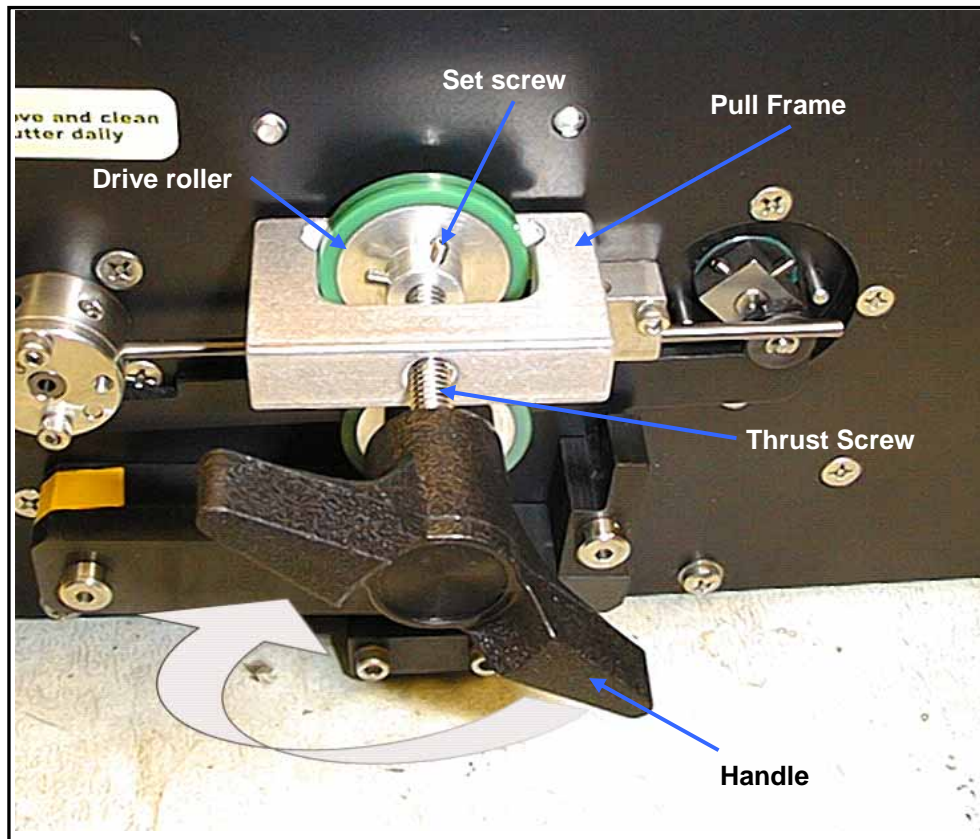

- 1) Loosen the drive roller's set screws.
- 2) Slide the pull frame over the drive roller with the thrust screw centered to the drive roller's shaft.
- 3) Turn the handle clockwise until the drive roller slides off the shaft.